# INSTALLATION INSTRUCTIONS


Follow these steps for proper installation.

## Before You Start

The yellow high beam wire on this piggyback loom must not be connected directly to additional lights. It is designed only as a trigger wire for use with a suitable relay wiring loom**. If you are installing an LED grille other small voltage LED lights, go back to the download page for instructions.**

## Step 1 – Locate the Factory Connector

Locate the vehicle's factory headlamp connector.

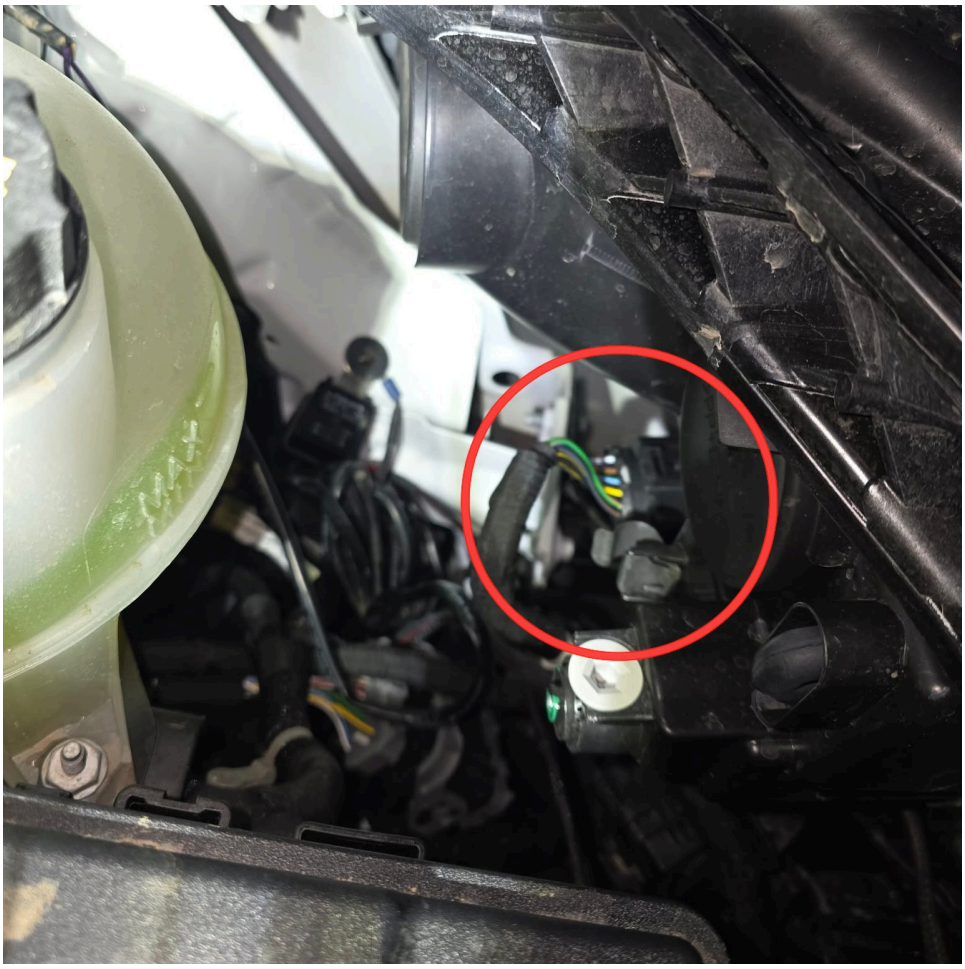

## Step 2 – Disconnect the Factory Plug

Carefully unplug the factory connector.


Do not force it.

If resistance is felt, double-check the locking tab is fully released



## Step 3 – Connect the Piggyback Loom


Ensure both connections click firmly into place.

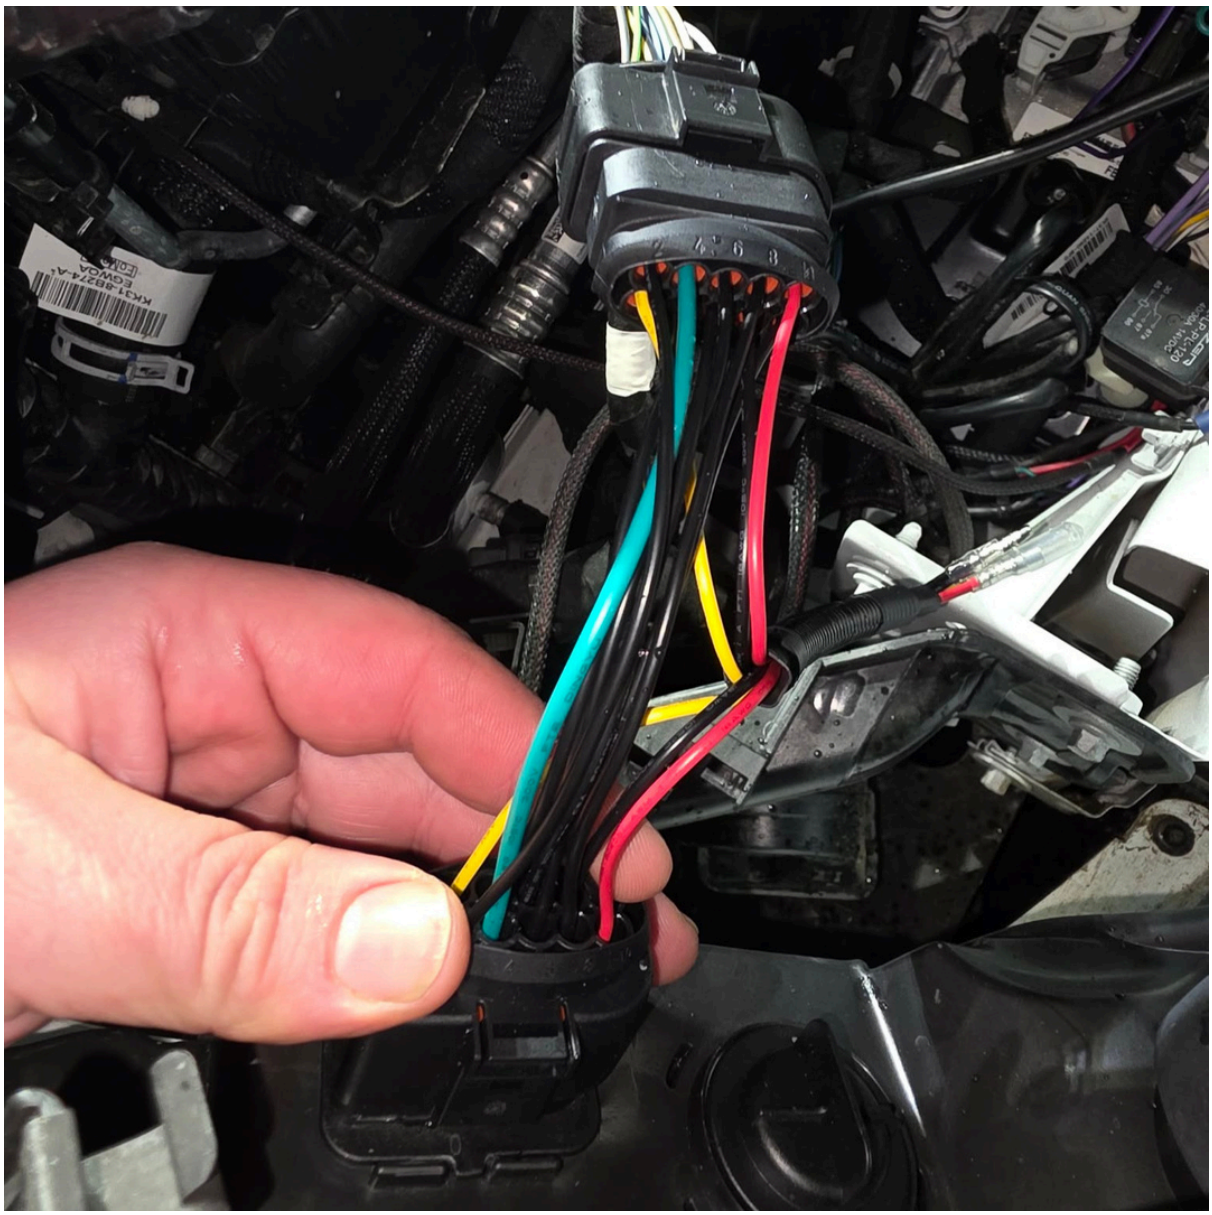

## Step 4 – Route the Relay Trigger wire

Route your relay input trigger wire safely towards the piggyback loom and connect to the yellow spade terminal using the supplied connector.

Avoid sharp edges, moving parts, or heat sources.

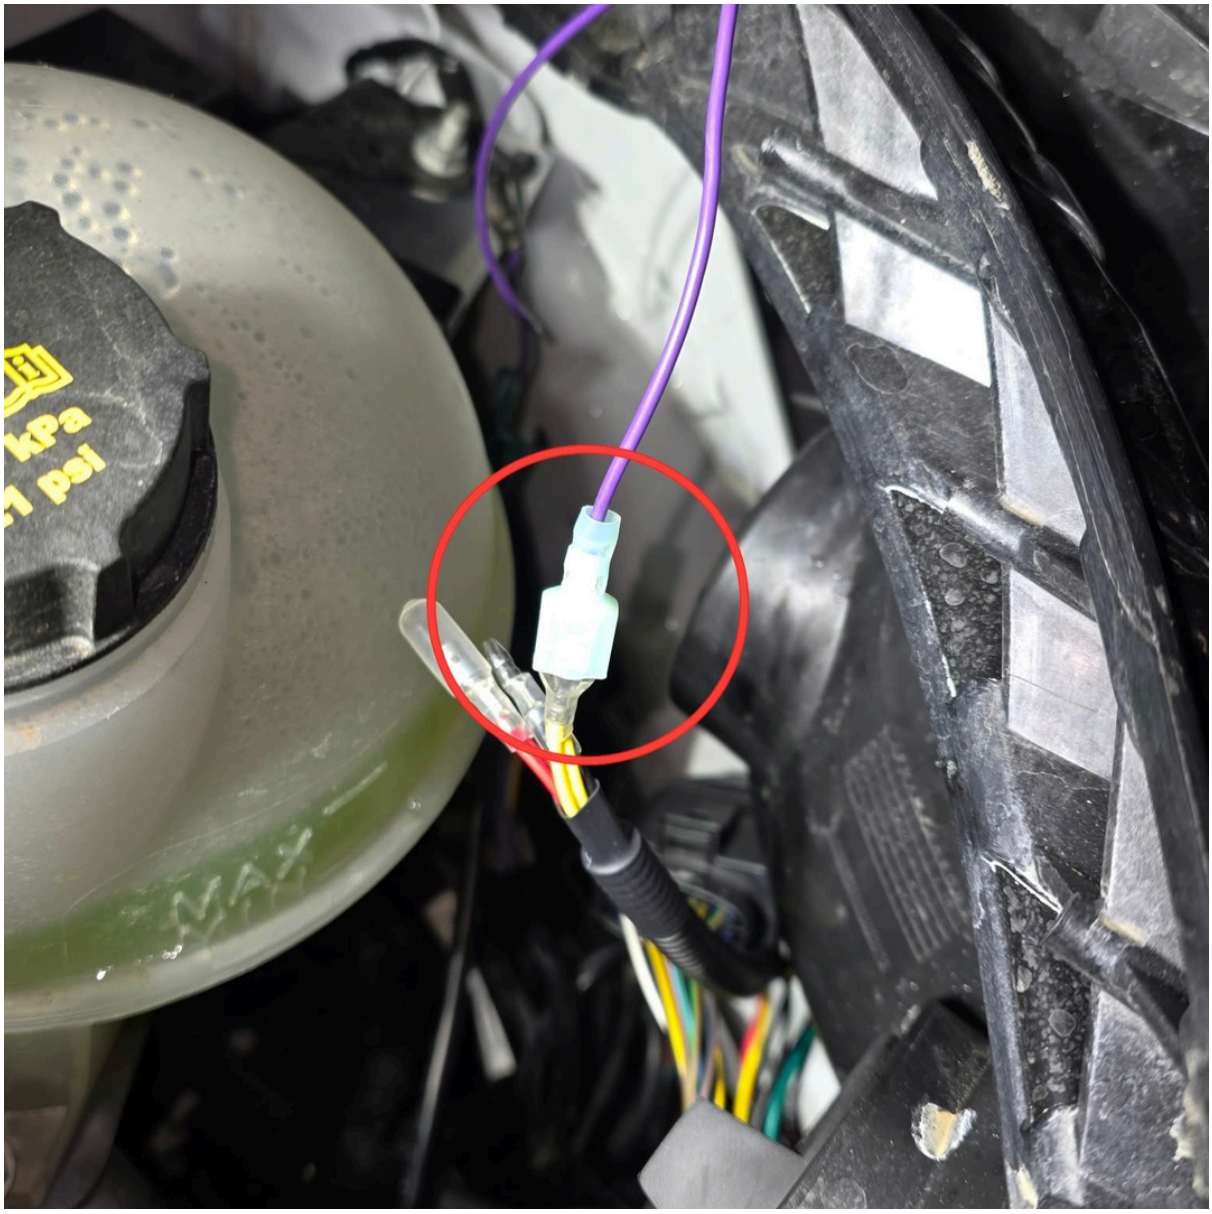


## Step 5 – Test the Installation

Switch the ignition on and test operation.

Confirm the additional lights activate correctly when the high beam is activated.

## Important Notes

**The YELLOW high beam wire is designed only as a trigger signal and a relay loom MUST be used or you will damage your vehicle body control module. THE RED AND BLACK WIRE ARE FOR FITTING LED GRILLE LED OR SIMILAR LOW VOLTAGE LIGHTS ONLY**