
INSTALLATION INSTRUCTIONS

Before You Start

Ignore the yellow high beam wire and do not connect it to your LED lights. It is intended solely as a signal for use with a relay wiring loom and not to be used in this project.

Step 1 – Locate the Factory Connector

Locate the vehicle's factory headlamp connector.

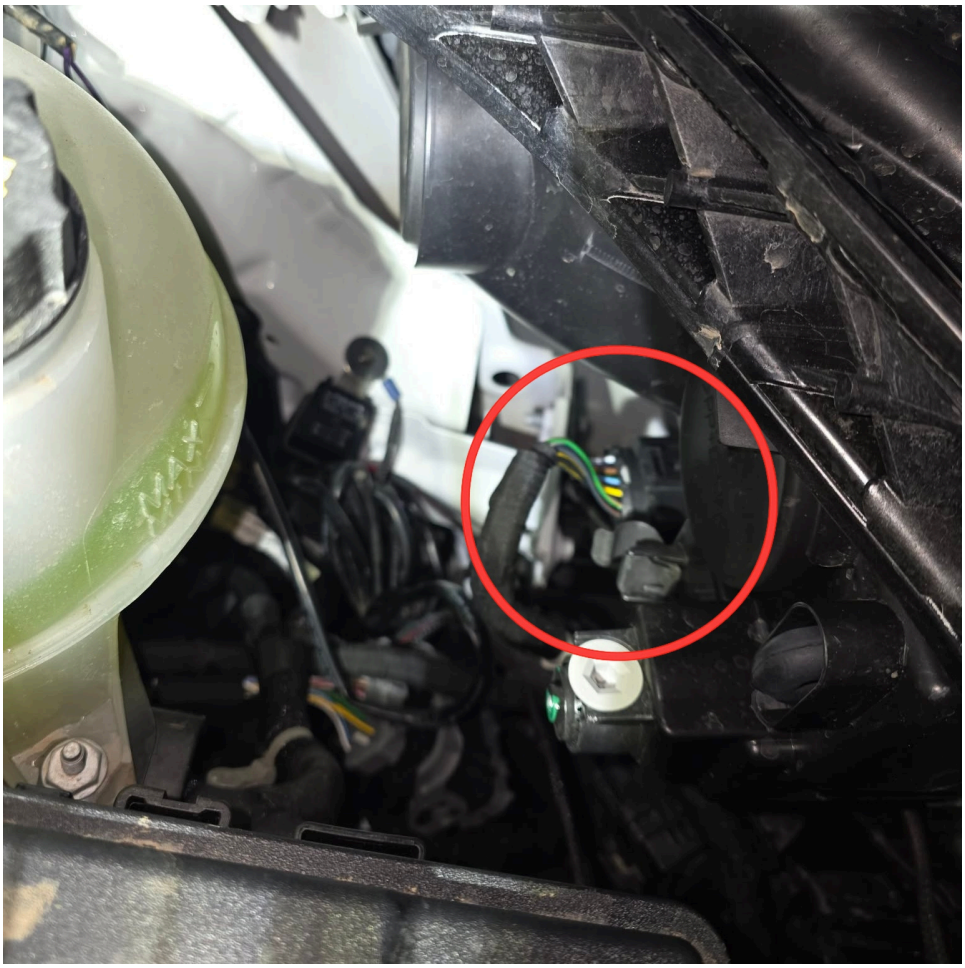

Step 2 – Disconnect the Factory Plug

Carefully unplug the factory connector.


Do not force it.

If resistance is felt, double-check the locking tab is fully released



Step 3 – Connect the Piggyback Loom


Ensure both connections click firmly into place.

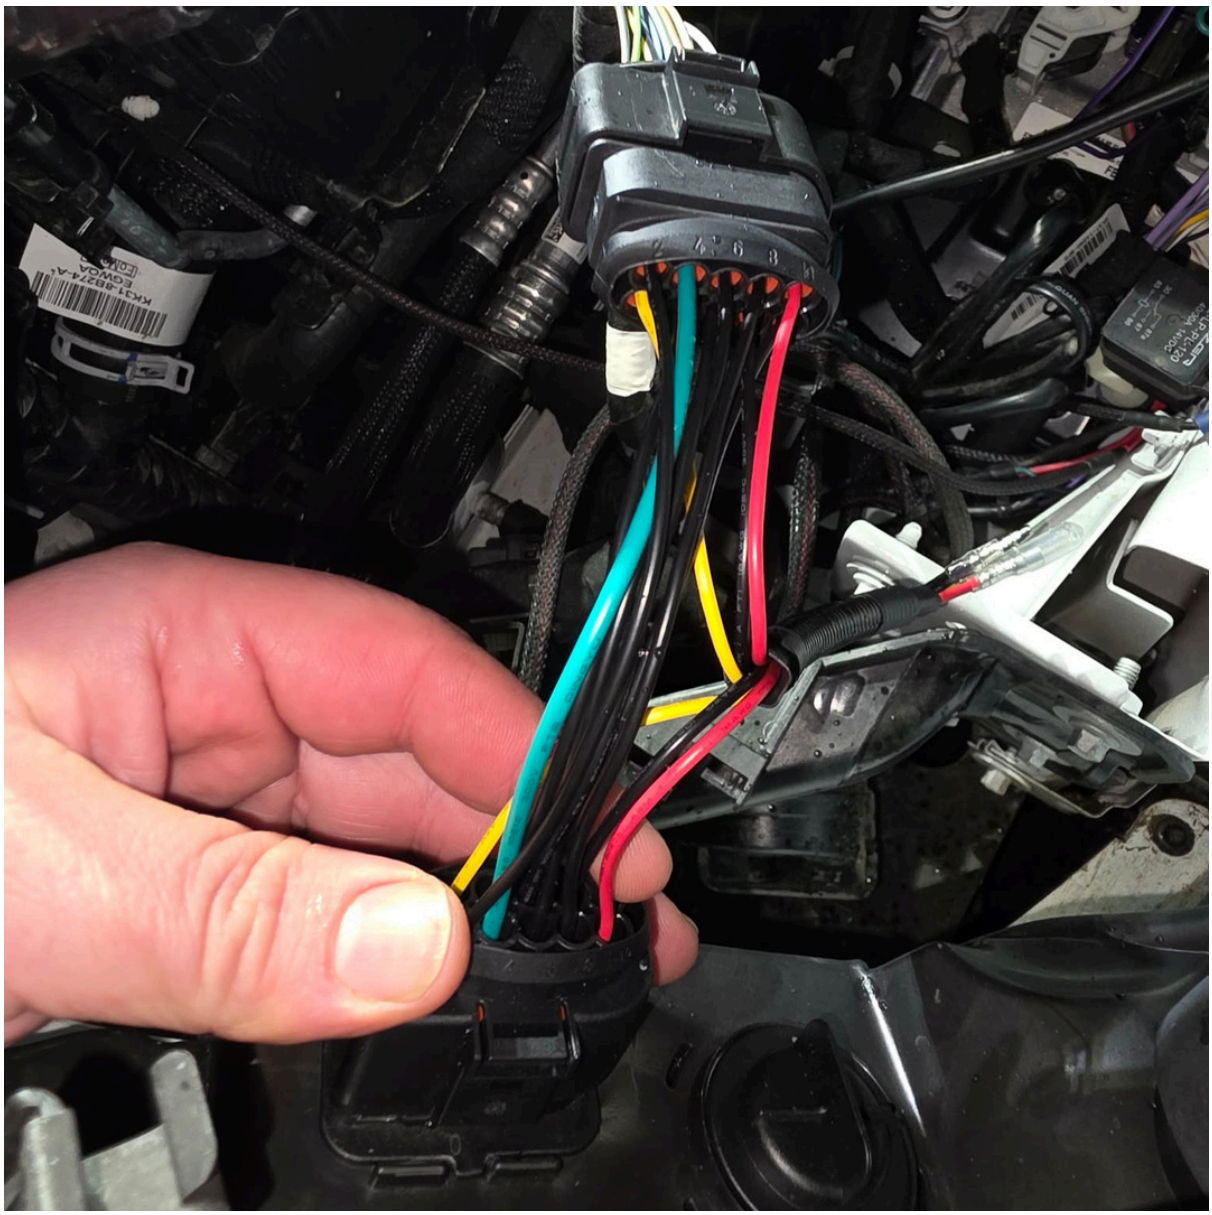

Step 4 – Route the grille wiring loom

Route your LED grille wiring safely towards the piggyback loom and connect to the red and black wires using the joining connectors that we have provided.

Avoid sharp edges, moving parts, or heat sources.

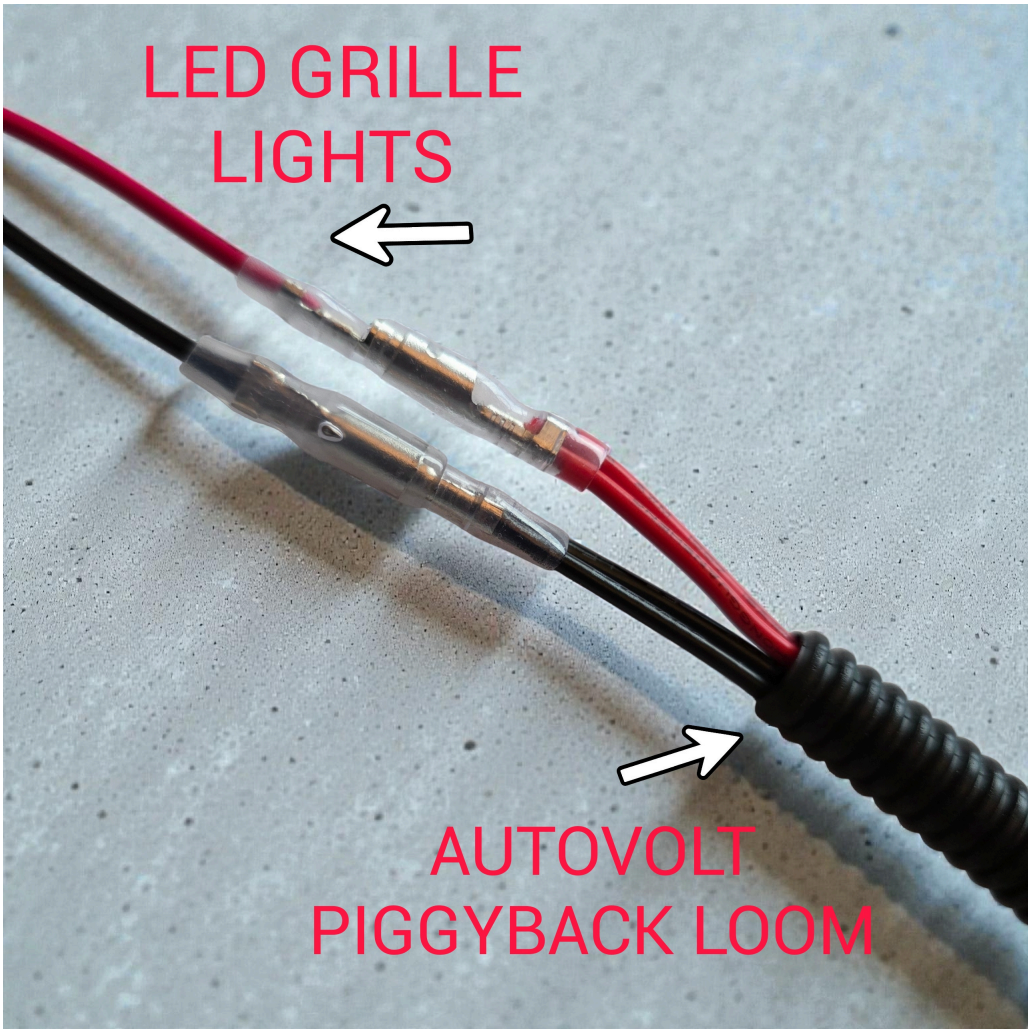

Step 5 – Test the Installation

Switch the ignition on and test operation.

Confirm the lights activate correctly when the ignition is turned on and when the van is started - **THE LIGHTS WILL NOT ACTIVATE WHEN THE VAN IS UNLOCKED**

Important Notes

The yellow must not be used in this application or you will damage your vehicles body control module.