
INSTALLATION INSTRUCTIONS

Before You Start

Ignore the yellow high beam wire and do not connect it to your LED lights. It is intended solely as a signal for use with a relay wiring loom and not to be used in this project.

Step 1 – Locate the Factory Connector

Locate the vehicle's factory headlamp connector.

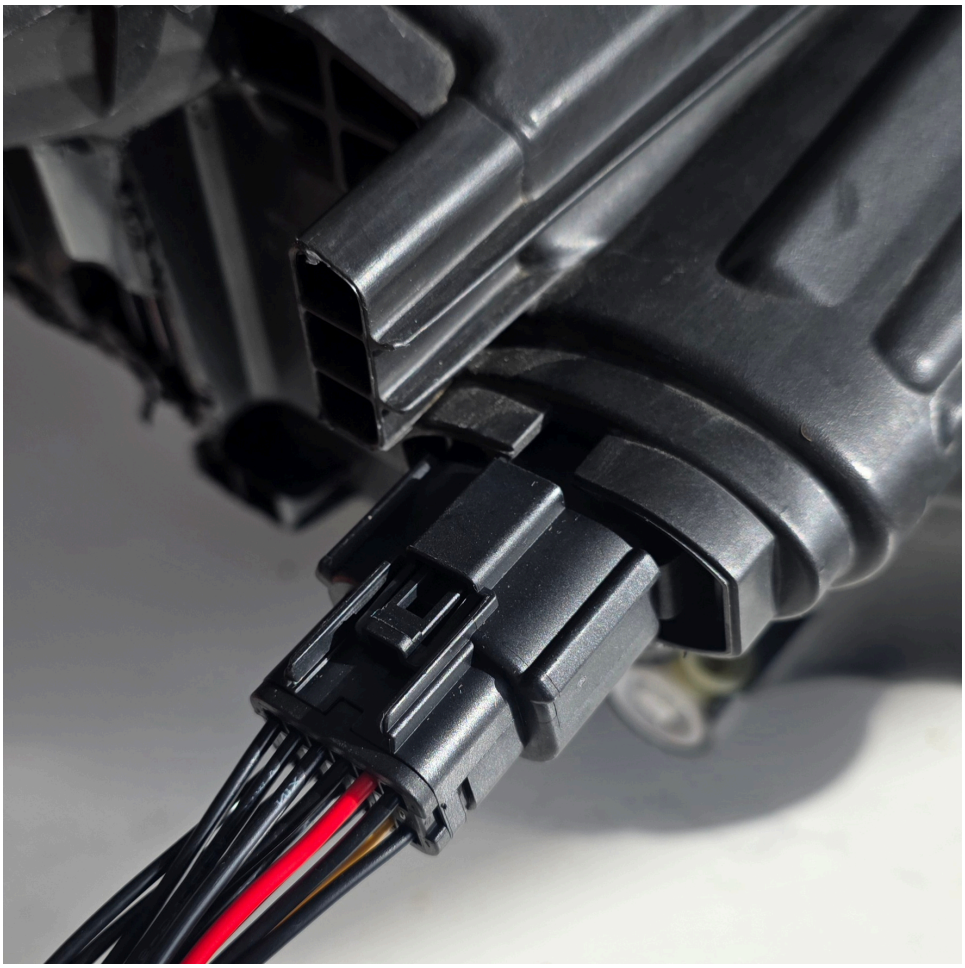

Step 2 – Disconnect the Factory Plug

Carefully unplug the factory connector.

Do not force it.

If resistance is felt, double-check the locking tab is fully released



Step 3 – Connect the Piggyback Loom

Ensure both connections click firmly into place.



Step 4 – Crimp the supplied Connectors onto the VOLTIS SWEEP wiring loom

Use a set of pliers to crimp the supplied connectors onto the VOLTIS SWEEP LED grille wiring. **TAKE NOTE OF MAKING SURE TO FIT THE SILICONE PROTECTOR FIRST AND THE CORRECT CONNECTOR IS FITTED TO EACH WIRE LIKE BELOW**




Step 5 – Fit the in-line fuse

Gently push the in-line fuse onto the red wire.



Step 6 - Connect the wiring

Make the connection to the AutoVolt piggyback loom. **The yellow wire must not be used in this application or you will damage your vehicles body control module.**

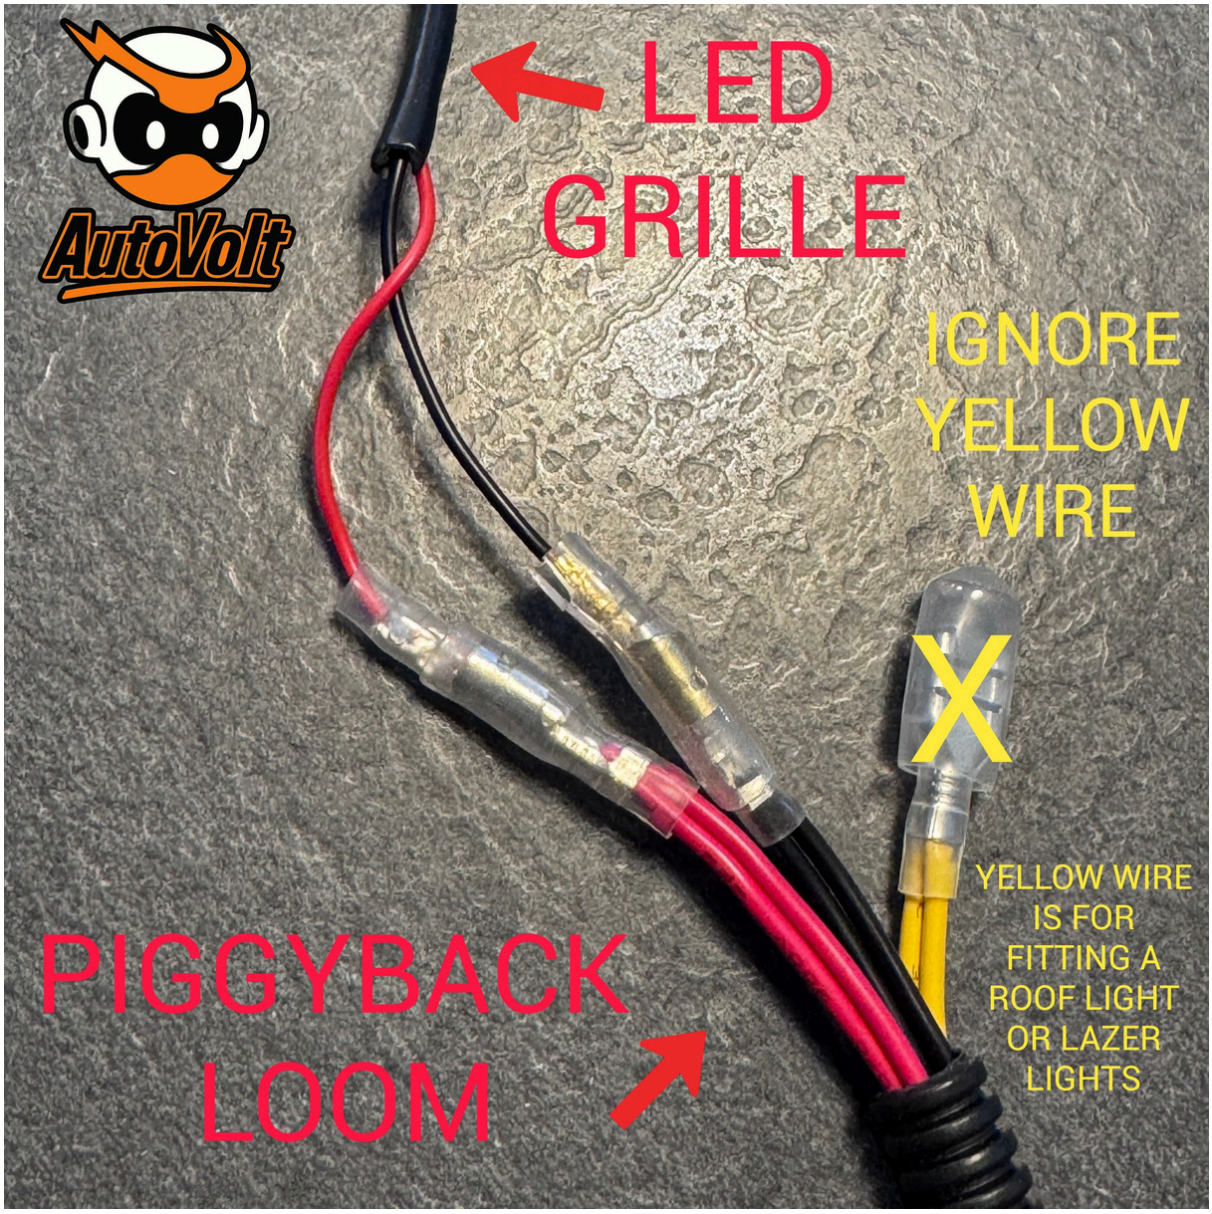

All content within this installation manual, including text, images, and diagrams, is the intellectual property of AutoVolt Solutions Ltd and is protected by copyright law. No part of this document may be reproduced, distributed, or used in any form without prior written permission from AutoVolt Solutions Ltd. For more information and to view our full range of products, please visit www.autovolt-solutions.com